

## Quick Start Guide


Thank you for purchasing a Bearifi Edge Mesh Satellite expansion pack. To use this pack you must already have an existing Bearifi Edge Mesh network in operation. Please follow the steps below to synch your new Satellite with your existing Bearifi Edge Mesh network.

A. Place your Satellite unit in a location of your home or office that is close enough to be within range of your Bearifi Edge Mesh AP, but far enough away so the Satellite can extend coverage.

B. Power on your Satellite unit and wait 120 seconds.

C. Connect your PC or Wi-Fi enabled device to your Bearifi Edge Mesh Wi-Fi network. The default name of your Bearifi Edge Mesh Wi-Fi network is "Bearifi" unless you have manually changed the network name.

### On Microsoft Windows

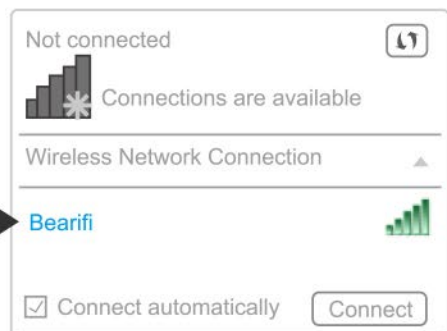

D. Open a web browser and enter 192.168.10.1 into the navigation bar and hit enter to login.

E. Go to Wi-Fi > Mesh Network

F. In the Extender MAC Address box, enter the MAC address on the label of the Satellite (this is printed on the bottom side sticker of your Satellite unit). Be sure to type correctly or it will not join. Then click + to join the Satellite to your Bearifi Edge Mesh network.



G. Final step: after the Bearifi Edge system has restarted, wait for the Satellite to flash red. Then power off Satellite and power it back on. After Satellite reboots, it should show a solid blue light.

### Alternate configuration option: join Satellite to network using Pair process

You can pair your Satellite with your Bearifi Edge Mesh network by taking these steps

- Plug the Satellite into a power outlet near the Mesh AP
- Press and hold the reset button on the **Mesh AP** for 1 second, the square LED flashes blue. Within 2 minutes, press and hold the reset button on the **Satellite** for 1 second. After the square LEDs of the Mesh AP and the Satellite light **solid blue**, the pair process is complete.
- Find an ideal spot, and reposition the Satellite.